

CONVERSION KIT




B|Active 84+

for Volkswagen Caddy Maxi



- ◆ **multifunctional wheelchair accessible vehicle**
- ◆ **1 wheelchair user / up to 7 passengers**
- ◆ **Built-in quickly WAV-kit**

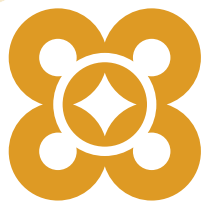


B|STYLE

MOBILITY SOLUTIONS



Built-in quickly WAV-kit

The 84+ conversion can be completed very quickly by conversion companies, in just 16 hours. This is possible because the original tank is maintained and therefore fewer parts are needed. That makes this kit very attractive from the cost perspective. The floor is slanted and built over the tank.

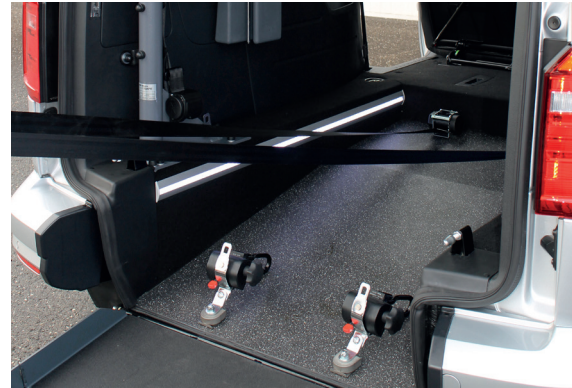

Convenient features

There are many features designed for maximum user-friendliness, like the belts that can be attached to the wheelchair while it is still outside the Caddy Maxi. An integrated safety feature prevents the wheelchair passenger from rolling backwards on the wheelchair ramp; only upward movement is possible. Super convenient!



Configurations

Everyone can come along! The original rear seat remains in the Caddy Maxi, and it can still be used when transporting a wheelchair passenger. This means that the Maxi can carry five passengers and one wheelchair passenger. If that is not enough, there is still room for a pair of separate seats in the third row, available as an option, allowing you to accommodate a maximum of seven passengers.



B-Active Caddy Maxi 84+

The number '84' refers to the width of the wheelchair space. The Volkswagen Caddy Maxi B-Active 84+ is mostly used for professional use, such as taxi transport.



Personalization Caddy wheelchair car

You can opt for high-quality vinyl on the floor. The sides of can be fitted with an aluminium strip or ABS plastic cut to size. A LED strip is available that automatically lights up. Operation of the wheelchair ramp can be made easier with a gas spring, which can be optional be folded inwards in its entirety, so it can lie horizontally to provide extra luggage space.





Inventor of the wheelchair car

With decades in the industry (since 1973), B-style knows exactly what is needed for a wheelchair accessible vehicle. We have thought of everything, such as a comfortable sitting position for the wheelchair passenger, easy entry, safe 5-point belt attachment that meets the strict European requirements, simple, light operation and a beautiful finish.



B|STYLE


CREATE A BIGGER WORLD

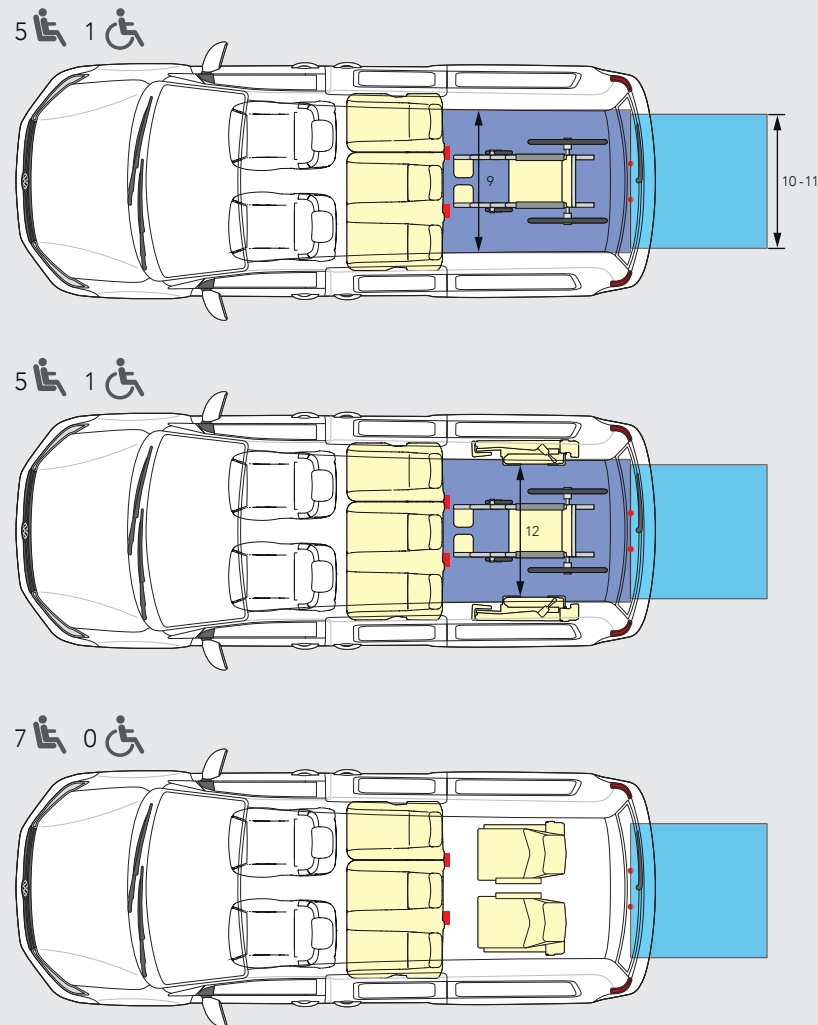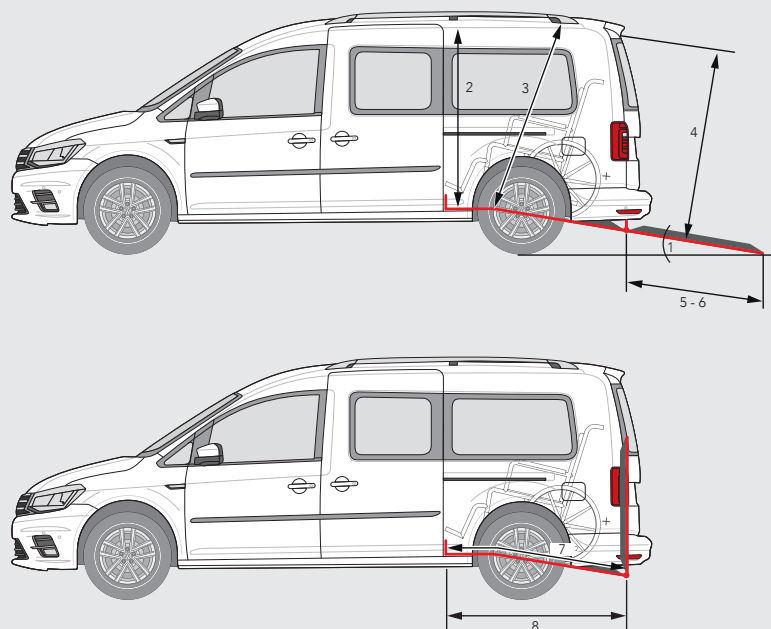

Nr.	Description	Sizes (+/- cm)
01	Slope of ramp	11°
02	Interior height	140
03	Interior height (headroom) wheelchair passenger	145
04	Entry height	142
05	Length wheelchair ramp, ramp – double – folding tip	112
06	Length wheelchair ramp, ramp – double – taxi	120
07	Length lowered floor	149
08	Length lowered floor - horizontal	146
09	Width lowered floor, steel - steel	84
10	Width wheelchair ramp, ramp – double – folding tip	80
11	Width wheelchair ramp, ramp – double – taxi	76
12	Width between seats when folded	79

Configuration options

The B-style WAV kit provides lots of interior space for all passengers. You can choose for tip-and-turn seats for the 3rd row to carry as many as 7 passengers.

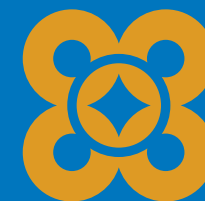

B|STYLE

CREATE A BIGGER WORLD



Original tank



Built-in-quickly (18 h)



No welding required



Step-by-step installation manual



In addition 2 tip-and-turn seats



Premium Partner Volkswagen
Nutzfahrzeuge



Ramp endurance test
30.000 x 400 kg



2 kind of wheelchair ramps



- Whole Vehicle Type Approval
- Certificate of Conformity + LONO



B-style

+31 418 638200
info@b-style.eu

Take a look at our
other products at
b-style.eu



B|STYLE

CREATE A BIGGER WORLD