

CONVERSION KIT



B|Active


for Opel Combo Life XL

Peugeot Rifter L2

Citroën Berlingo L2



- ◆ **multifunctional wheelchair accessible vehicle**
- ◆ **1 wheelchair user / up to 7 passengers**
- ◆ **Built-in quickly WAV-kit**

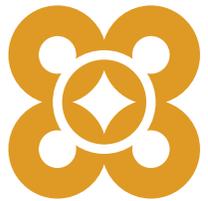


B|STYLE

MOBILITY SOLUTIONS



Heavy duty quality

In and out, all day long? In that case, quality is essential. The wheelchair ramp has been endurance tested with 400 kg load 30,000 times and the latching mechanism a staggering 90,000 times. This is one of the reasons the L2 is perfectly suited to professional use.

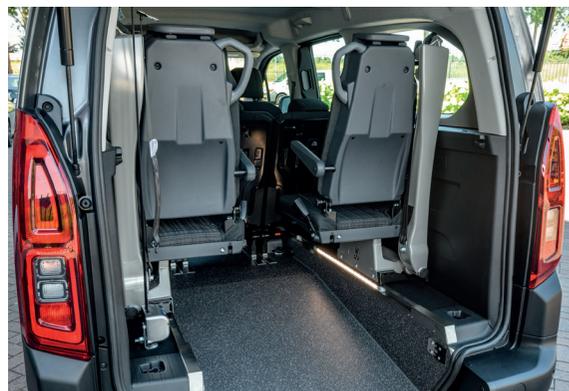

Flexible seating configuration

For the second row you can order three individual seats or a bench with 60/40 split, straight from the factory. These original seats remain usable after conversion, even when transporting a wheelchair passenger. A pair of folding seats can be added in the third row as an option, bringing the total number of passengers to seven or, alternatively, five seated and one wheelchair passenger.



Extra big wheelchair space

In the case of a special, extra-large wheelchair, the second row of seats can be pushed forward by up to 8 cm thanks to a rail that is also part of the B-Active conversion kit. Of course, in that specific case, two of the second row seats cannot be used, only one.



Custom suspension set

A unique feature of this kit is the suspension set specially developed by VB, which ensures perfect handling under all circumstances and a comfortable ride. This suspension set is included with the B-Active kit.




Create a bigger world

You broaden the wheelchair passenger's horizons, both in terms of the vast interior space and the new possibilities the B-Active opens. This is what makes this extended version so popular as a wheelchair accessible vehicle. Access is very easy thanks to the wheelchair ramp, which is at a low angle of 11 degrees.




Wheelchair ramp options

You can opt for an extra light version of the wheelchair ramp, and it operates even easier with an optional gas spring. In terms of the wheelchair ramp layout, there are two options, one of which can be folded back for a better view to the rear (folding tip), and one that can be folded inwards in its entirety for more luggage space when no wheelchair passenger is present (taxi ramp).

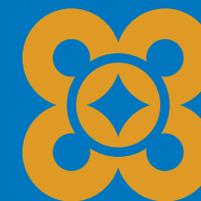


B|STYLE

CREATE A BIGGER WORLD

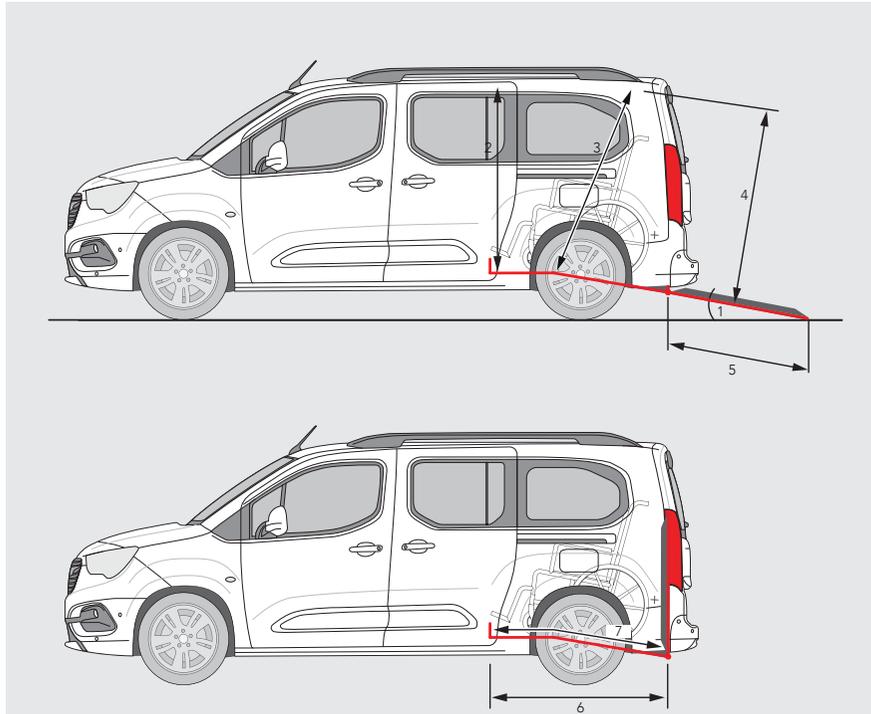


Nr.	Description	Sizes (+/- cm)
01	Slope of ramp	11°
02	Interior height	134
03	Interior height (headroom) wheelchair passenger	144
04	Entry height	142
05	Length wheelchair ramp	150
06	Length lowered floor – horizontal	159
07	Length lowered floor	161
08	Width lowered floor, steel – steel	82
09	Width lowered floor, with basic or vinyl interior	81
10	Width lowered floor, with LED lighting left or right	82
11	Width wheelchair ramp	78
12	Length after 2 nd row – seats in normal position	134
13	Length after 2 nd row – seats pushed forward	142
14	Width between left en right seat	45
15	Width between right seat and side	63.5

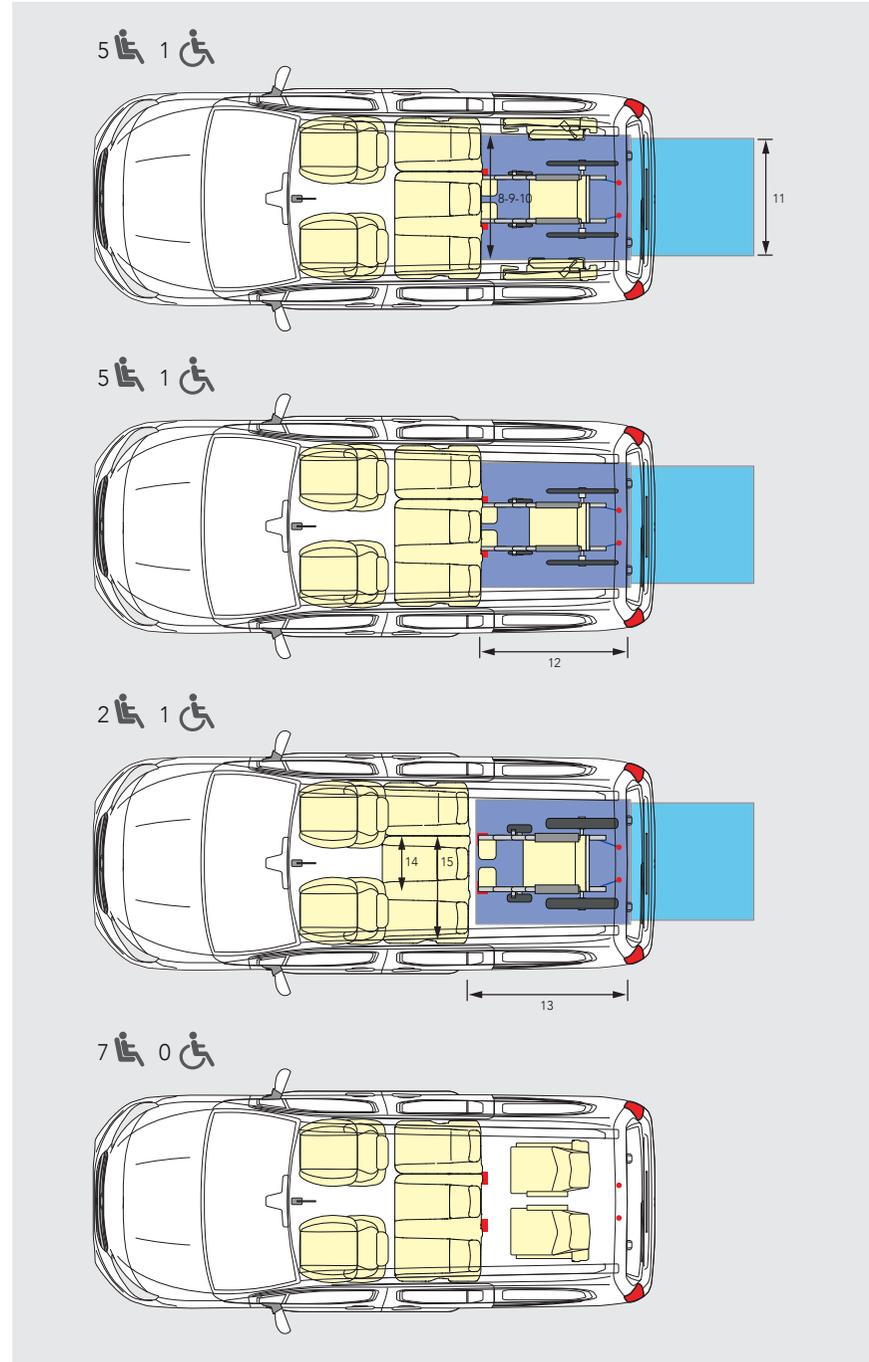

Configuration options

The B|style WAV kit provides lots of interior space for all passengers. There are many configurations to choose from.

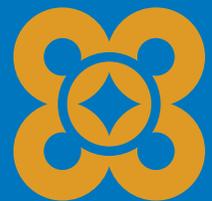

B|STYLE


CREATE A BIGGER WORLD



Original Fuel + AdBlue tank




Built-in quickly (18-20 h)

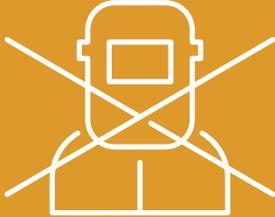

No welding required



Step-by-step instruction manual

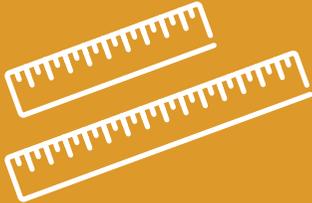


Available for 2 lengths (L1 and L2)



Quality Certificate Level 3 of PSA



**Ramp endurance test
30.000 x 400 kg**

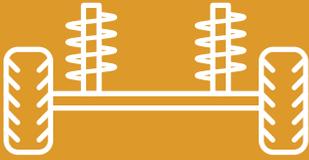

Custom suspension set



**- Whole Vehicle Type Approval
- Certificate of Conformity**



TUV
ISO 9001



NEN
STANDARDS COMMITTEE MEMBER



RDW



EMG
european mobility group



CEVA
Organisation Européenne des
Constructeurs de Véhicules Accessibles



rai
vereniging

B-style
+31 418 638200
info@b-style.eu

Take a look at our other products at b-style.eu